


◆ Thanks for purchasing photoelectric dual beam detector, please read the user manual carefully before installation.

 WARNING	Do not use the product for purposes other than the detection of moving objects such as people and vehicles. Do not use the product to activate a shutter etc. which may cause an accident.
	Do not touch the unit base or power terminals of the product with a wet hand (do not touch when the product is wet with rain etc.) It may cause electric shock.
	Never attempt to disassemble or repair the product. It may cause fire or damage to the devices.
	Do not exceed the voltage or current rating specified for any of the terminals during installation, doing so may cause damage to the devices.
 CAUTION	Do not pour water over the product with a bucket, hose etc. The water may enter which may cause damage to the devices.
	Clean and check the product periodically for safe use. If any problem is found, do not attempt to use the product as it is and have the product repaired by a professional engineer or electrician.

1.Features


- Interruption time or walkspeed adjustable
- NO / NC relay outputs
- Integrated tamper switch, turns on when cover is moved.
- Frequencies selectable for long distance and stacking installations
- LED display signal grading for easy alignment
- Wide voltage power input: DC/AC 12-24V
- Waterproof grade: IP65
- Alignment angle horizontally $\pm 90^\circ$, vertically $\pm 10^\circ$
- Digital filtering, high environment adaptability to eliminate false alarms
- Integrated heating function, reliable in cold/frost/fog weather.

2.Part Description

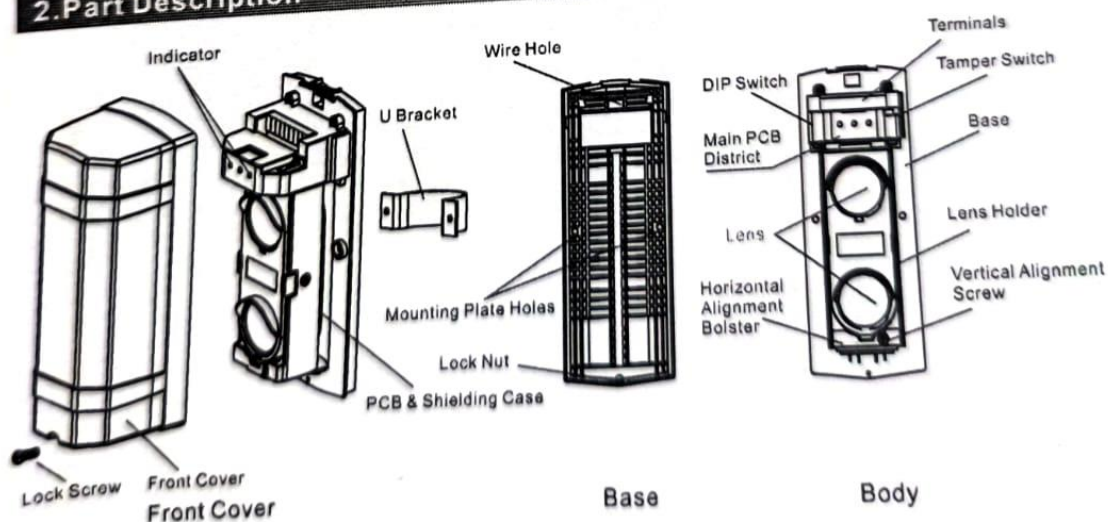

3. Installation Notes


(1). Please avoid below situations to assure performance

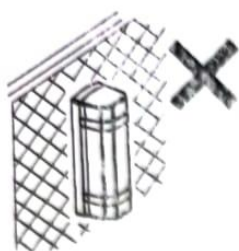


1. Do not install on an unsteady or moveable base




2. Do not install the unit where objects can block the beams like plants and laundry moving in the wind.

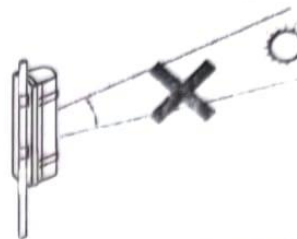


3. Prevent direct sunlight onto the RX or TX. NB! DO NOT POINT RX OR TX INTO DIRECT SUNLIGHT AS THE LENSES ACT AS A MAGNIFYING GLASS AND CAN CAUSE DAMAGE TO THE DETECTOR OR EVEN BECOME A FIRE HAZARD

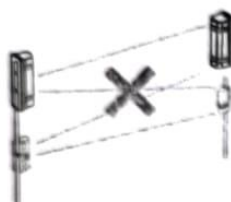

4. Avoid cross talk. Use frequency select (stack installation only for the same model)

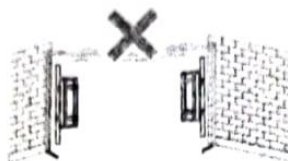

5. Avoid exposing wiring.

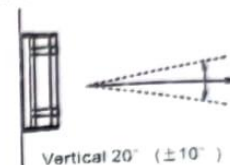


6. Make sure not to adjust vertical angle on RX & TX in to direct sunlight

(2). Normal installation


◆ Detection distance

Detection Distance	40m	60m	80m	100m
Beam Angle	1.1m	1.2m	1.8m	2.4m


◆ Mounting height

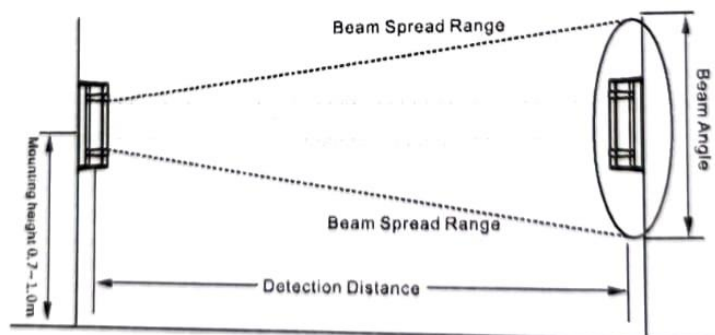

◆ Adjusting angle

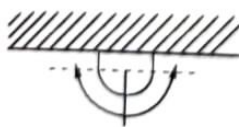

Horizontal 180° (±90°)

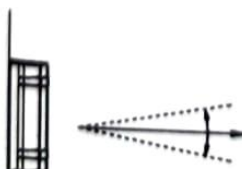

Vertical 20° (±10°)

Notice: For best testing results, please avoid testing in 45°


dimax

SENSOR DE HAZ, 2 HACES 60M,
4 FRECUENCIAS


A312

4. Setting Method


◆ Wall mounting

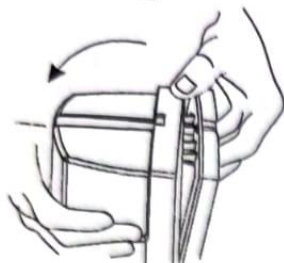

1. Loosen the screw and remove the cover

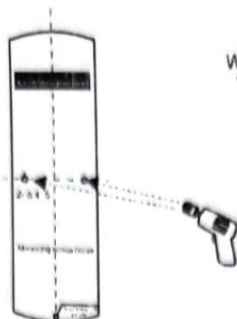


2. Attach the installation paper to the wall, mark the holes first and then make the guide holes.

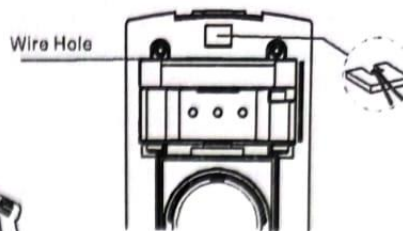

3. Wire hole: remove the foam plug, pull wire through, and reset the foam plug.



4. Attach beam to the base

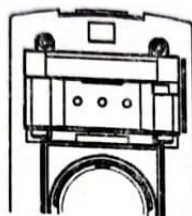

5. Connecting wires to the terminals (please refer to "beam alignment")




6. Review and reset the cover


◆ Pole mounting




1. Break out the wire hole and pull out the wires.

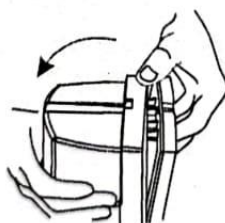


2. Remove the cover

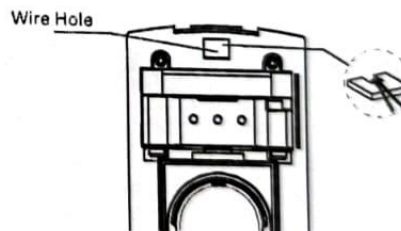

3. Drop into the holes with expansion pipe, fix it with screws.

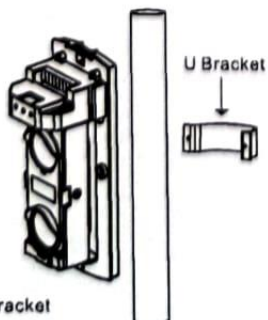

4. Fix the body on the bracket

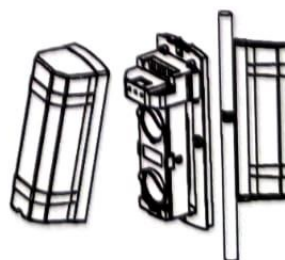

5. Back to back installation diagram, others please refer to the step 5 & 8 of the wall mounting method.

dimax

SENSOR DE HAZ, 2 HACES 60M,
4 FRECUENCIAS

A312


5. Connectors



Warning

Do not exceed the voltage or current rating specified for any of the terminals during installation.

Transmitter:

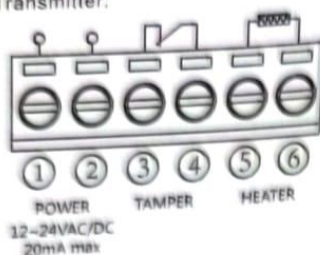

1. Power Input: DC/AC12-24V.
2. No heater in the package, please order if required.
3. Tamper switch (NC) is independent of the circuit, anti-tamper trigger when cover is removed.


Receiver:




1. Power Input: DC/AC12-24V
2. No heater in the package, please order if require
3. Tamper switch (NC) is independent of the circuit, anti-tamper trigger when cover is removed.
4. C relay (30VDC 1.0A max).

6. Connecting Wires

(1). Single connect: Control panel operating voltage DC12V, NC alarm output. Connecting to power supply parallel

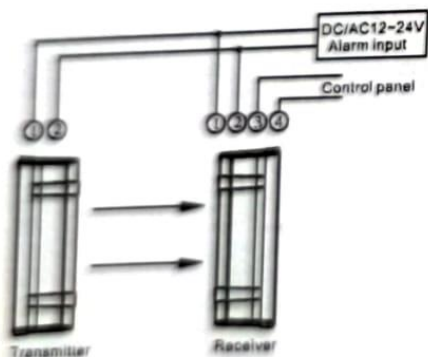

(2). Stacked connect: Control panel operating voltage DC12V, NC alarm output series connect

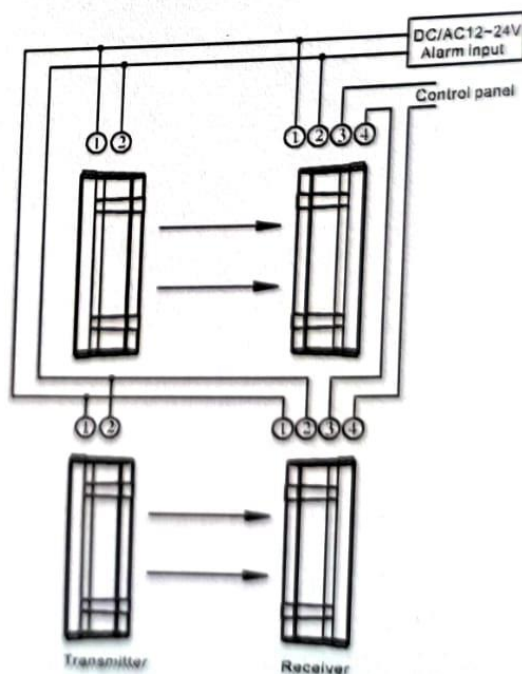


dimax

SENSOR DE HAZ, 2 HACES 60M,
4 FRECUENCIAS

A312

(3). 2 pairs install in series: Connect power of transmitter and receiver in series with 12V DC on power supply. Alarm output is N.C.
As below:

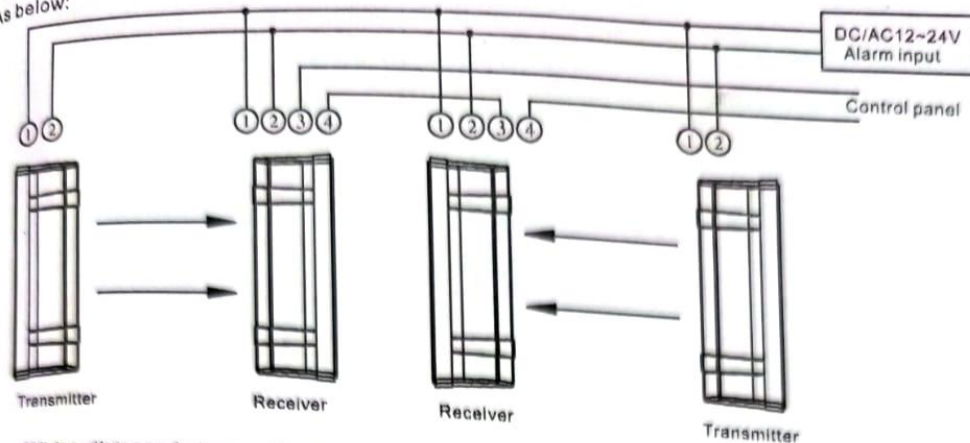

Wiring distance between the power supply and the detector should not exceed the following table length.

Wire diameter	Length	DC12V	DC24V
0.5mm ² (Φ0.8)		400m	2000m
0.75mm ² (Φ1.0)		600m	3000m
1.0mm ² (Φ1.2)		800m	4000m
1.5mm ² (Φ1.4)		1000m	5000m




Warning


1. The power wire can't exceed the listed length.
2. When connecting multiple detectors, the required cable length is divided by the corresponding number of units listed.
3. Don't connect the port with the voltage or current which is over the normal specification.

7. DIP Switch Explanations

DIP switch show on the left side of the main PCB, as shown in following figure.

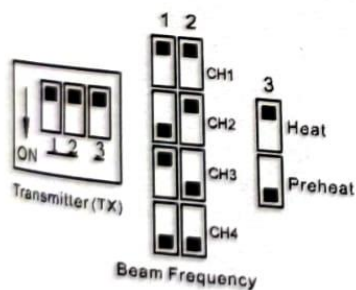

- DIP switches 1&2: Set beam frequency. TX and RX must be the same.
- DIP switch 3: Set heater. Preheat is for test. If the heater is installed, keep it on Heat position for normal use.

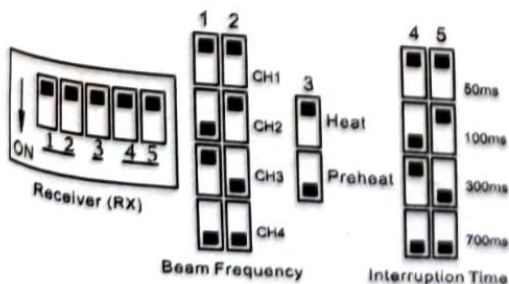

- DIP switches 1&2: Set beam frequency. TX and RX must be the same.
- DIP switch 3: Set heater. Preheat is for test. If the heater is installed, keep it on Heat position for normal use.
- DIP switches 4&5: Set interruption time. 50/100/300/700ms optional.

dimax

SENSOR DE HAZ, 2 HACES 60M,
4 FRECUENCIAS

A312

8. Optic Axis Adjustment

1. Set TX and RX same frequency by DIP switches 1 & 2.
2. Adjust the beams vertically and horizontally, it is well aligned if LED shows "99".
3. Do "walk test" to ensure it'll activate alarm normally. If failed, please re-do alignment. If alignment keeps failing, please refer to troubleshooting.

99

Signal strength	00~40 Realign
	41~70 Fair
	71~90 Good
	91~99 Best



9. Walk Test

Power Alarm Alarm Status 99	Please make sure the alarm indicator is off before testing. If not, redo the alignment.
1 Transmitter 3 Person 2 Receiver	Please do the test at the 3 following positions 1. At the transmitter side 2. At the receiver side 3. In the middle
Power Alarm Alarm Status 00	Alarm indicator turns on when beam is interrupted, test finished successfully.

Note: If the alarm LED indicator is OFF even though the beams are completely blocked, refer to the "Trouble Shooting".

10. Troubleshooting

Symptom	Possible cause	Remedy
Power on, but power LED off	1. No voltage on power cable; 2. Broken circuit or short circuit; 3. Beyond specified voltage; 4. Power cable exceeds the specified length	1. Check PSU, voltage, cables and connectors
When beam is blocked, the alarm LED does not indicate, nor does the alarm relay switch	1. There is reflection or cross-talk from other transmitters 2. Walk speed set too long 3. Alarm output cable is shorted or damaged	1. Change beam path or change TX/RX frequency channel 2. Ensure 2 beams all blocked 3. Change walk-speed setting 4. Check RX terminal and output cable
False alarm	1. Bad wiring and fluctuant power voltage 2. Randomly blocked, like birds, paper or leaves 3. The beams base is unstable 4. Out of alignment	1. Check power, current and wiring 2. Change installation location 3. Strengthen installation base 4. Re-align