

Cleaning and Maintenance

- Avoid operating the unit close to a strong-natural or artificial-light source.
- The effect of the UV light will be overpowered by that of the strong-natural or artificial-light source, diminishing the fluorescence of the analyzed bill or document.
- Do not use this product in areas where it may be exposed to water or other liquids.
- Dust may accumulate on the UV lamps, reducing its luminescence. Use a damp soft cloth for cleaning. Do not use liquid cleansers or aerosol cleaners.
- Unplug this product from the wall outlet before cleaning or replacing a lamp.
- Do not use this unit if the power cord is damaged or if the plug socket contact a loose. Not following these instructions may result in electric shock, fire or other hazards.
- When not using the unit for a long period of time, remove the power plug from the wall outlet.v

Features and Specifications

Features:
With powerful UV LED light
Identify the UV security features in banknotes
Automatic on/off sensor to save energy
Optional rechargeable battery for portability
Suitable for all currencies, cheques, passports, credit cards, etc.

Specifications:
Ambient Temperature: 0-45°C
Ambient Humidity: ≤85%
Power voltage: AC 100-240V 50/60Hz
Power Consumption: ≤6W
Net weight: Approx. 0.45g
Dimensions: Approx. 200*105*105mm

Notice: If the machine has some faults that you can't solve, please contact the Technical Support Dept of our company or our agent for services.

dimax
DETECTOR DE
BILLETES FALSOS
CON LUZ UV

MODELO: C893



MANUAL DE USUARIO

Thank you for purchasing the Counterfeit Detector. This manual will provide you with safety information, instructions for optimal use, and proper care and maintenance for your product. Please read this manual carefully before operating.

Safety Instructions

Please read the safety instructions before use. Please read all warnings and cautions carefully to avoid damage to the machine and personal injury.

WARNING

1. Do not expose your eyes directly to the Ultraviolet light source for extended periods of time.
2. Do not place the machine in an area where it may be exposed to water or other liquids.
3. Before cleaning the machine, always unplug the machine from the wall. Do not use liquid or aerosol cleaners.
4. Do not take apart the machine. When service or repair work is needed, bring it to a qualified service repair technician.
5. Do not use the machine in areas with high temperature or high humidity. This may result in the machine not working properly.

CAUTION

1. Do not use the machine if the USB cable is damaged.
2. Do not place objects on the power cord and do not bend it excessively.
3. When not using the machine for long periods of time, unplug the power cord from the outlet.

We recommend the user to verify that the box contains all of the items listed here:

- Counterfeit Detector
- USB Cable
- User Manual
- Wall Charger (optional)
- Rechargeable Battery (optional)

Machine Overview

- ① UV LED Light
- ② Power Switch
- ③ Start Sensor
- ④ 5V 2A Input Socket
- ⑤ Power Indicator
- ⑥ Battery



Operation

NOTE: Before you begin to check your bill or document, make sure you know and understand the security features of that specific bill or document. This will ensure that you are using this machine properly.



I: UV Light ON
O: OFF

Plug in the unit and turn the power on by flipping the power switch from "O" to "I"
Place the bill or document under the UV light. If the bill has ultraviolet ink or markings, the bill will glow.