

OBD GPS Tracker

User Manual



Specification

Content	Specs.
Dim.	50mm x 38mmx25mm
OBD Port	Support 16 pin standard OBDII port.
Network	GSM/GPRS
Frequency	850/900/1800/1900 MHz
GPS chipset	MTK high sensitivity chip
GPS channel	66
Tracking sensitivity	-165dBm
Location accuracy	<10 meters CEP
Time To First Fix(open sky)	Cold status <35s Hot status <1s
Working voltage	9-36VDC
GPRS Protocol	Class12, TCP/IP
Operating temp.	-20°C to +70°C
Standby & Working consumption	5mA~50mA
GSM / GPS antenna	Built-in
Ignition status detection	Support
Memory Capacity	1400 positions

Insert SIM card & Light Status

Support Nano SIM card with 2G network activated.

Red Light: Constant on means power supply OK

Green Light: Constant on means SIM card OK


Blue Light: Constant on means GPS located

\



Installation

In general, the OBD port is located in the driver or passenger cabin, from the edge of dashboard on driver side to the border of 300mm. It is easy to touch by sitting in the driver's seat, the preferred location is within the area from steering post to the vehicle center-line.

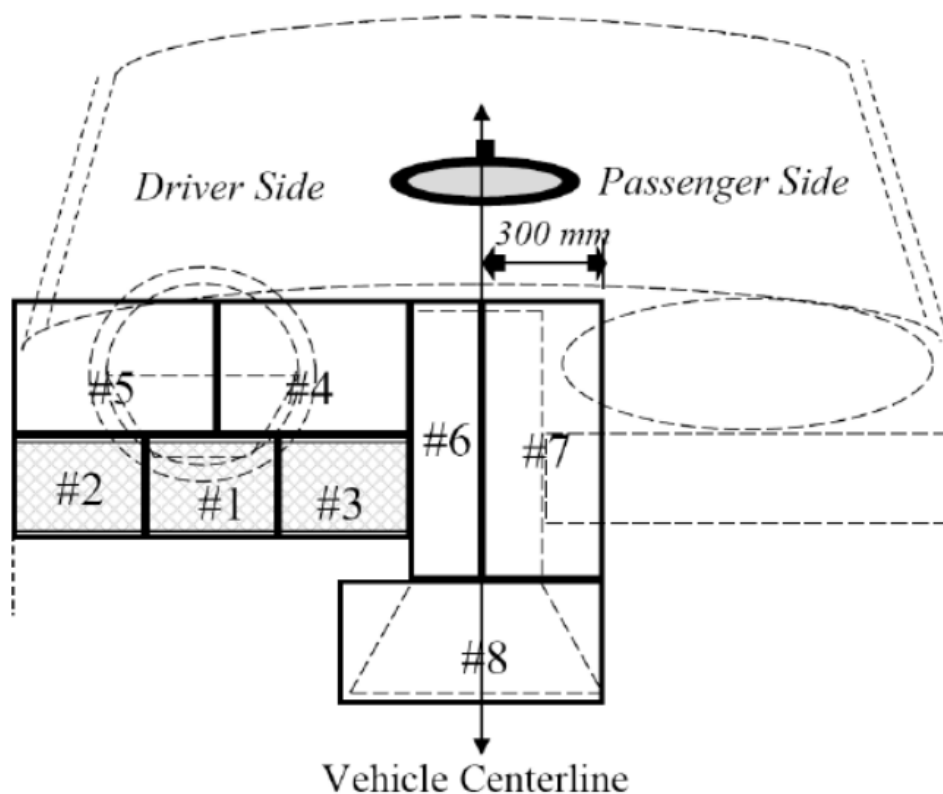




SMS Command List

Turn ignition on to power the tracker on. Every command sent successfully, device will reply "configure OK".

Description	Send SMS Command
Step1: Set APN	APN,localApn,ApnName,ApnPassword#
Step2: Set IP/Domain, port	IP,www.gps2828.com,7018#
Check device configuration	PARAM#
Set center number	CENTER,A,15817388888#
Cancel center number	CENTER,D#
Get SMS Google Link	WHERE#
Set ACC ON interval	TIMER,60# (Unit: second)
Restart device remotely	RESET#
Set time zone	GMT,E/W,8,00# Eg:GMT,W,5,00#, represent set -5 timezone
Set vibrate alarm	SENALM,1# Center number required!
Cancel vibrate alarm	SENALM,0#

Set voice listen	JT,1#	Center number required!
Cancel voice listen	JT,0#	
Voice recording	Send command from APP	
Restore Factory	FACTORY#	

SecumorePlus APP support voice record from APP

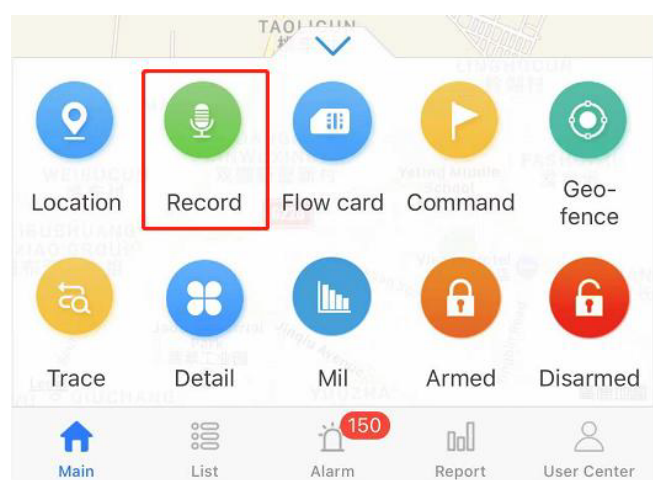

Tracking Software & Mobile APP

Website Portal: www.gps2828.com

Search APP name "SecumorePlus" from Playstore to download APP.

Login user: 15 digits IMEI number on tracker shell

Password: 123456.

How to change login user name instead of Use IMEI number?

Steps: Find "Detail" Button on APP Plate Number Input New user name in Capital Letter.